



CHIMNEY CHAMP

BEARING KIT INSTRUCTIONS




FOLLOW THE INSTRUCTIONS BELOW TO ASSEMBLE THE BEARING KIT FOR YOUR CHIMNEY CHAMP

COMPONENT BREAKDOWN

1. Bearing arms
2. Bearing housing
3. Bearing arm screws
4. Top screw
5. Dome section
6. Neck section

REQUIRED TOOLS

1. 1 x 10mm spanner
2. 1 x 13mm spanner

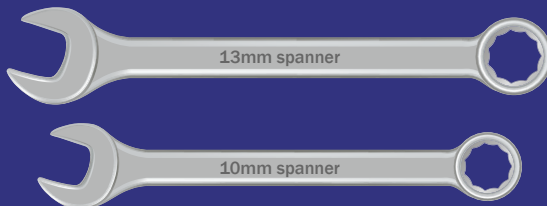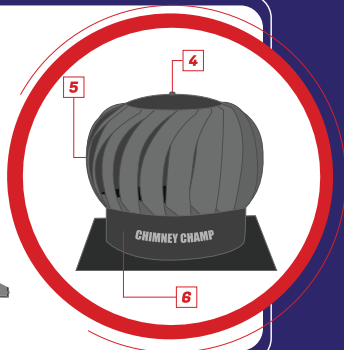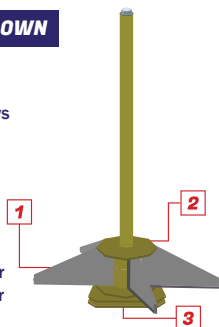

FOLLOW US ON 

www.windmaster.co.za | info@windmaster.co.za



CHIMNEY CHAMP BEARING KIT INSTRUCTIONS

FOLLOW THE INSTRUCTIONS BELOW TO ASSEMBLE THE BEARING KIT FOR YOUR CHIMNEY CHAMP


BEARING KIT CHANGE



Step 1: Remove top nut with 13mm spanner.



Step 2: Remove Dome section from neck section.

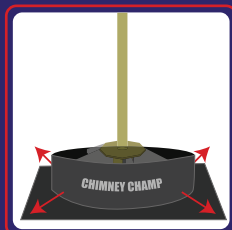

Step 3: Loosen 4 bearing arm screws.



Step 4: Remove damaged bearing kit.



Step 5: Replace with newly assembled bearing kit.



Step 6: Fasten all bearing arm screws and top screw.

FOLLOW US ON 

www.windmaster.co.za | info@windmaster.co.za